

Click here to email Sales@Eco-BuildingProducts.com
Click here to order online at Eco-BuildingProducts.com
Click here to call us at 231.399.0700


How to Install Electrical Flashing

(before WRB)

IMPORTANT: Always
refet to house wrap or
building paper
manufacturer's guidelines




1

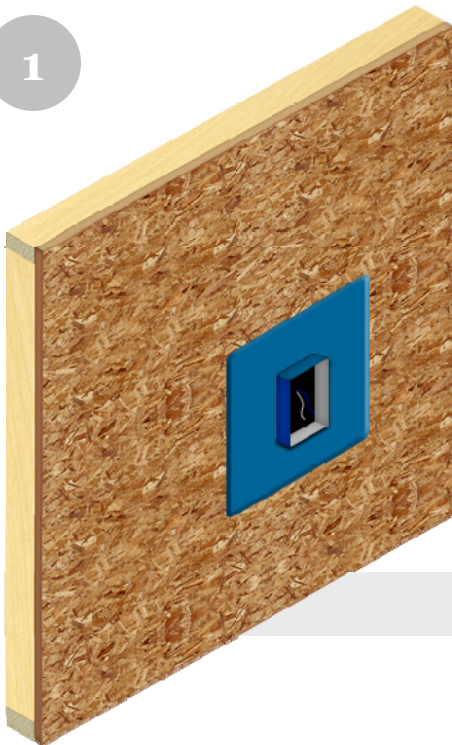


Slide Quickflash® panel
onto electrical box firmly
pressing panel against the
wall or studs.

2

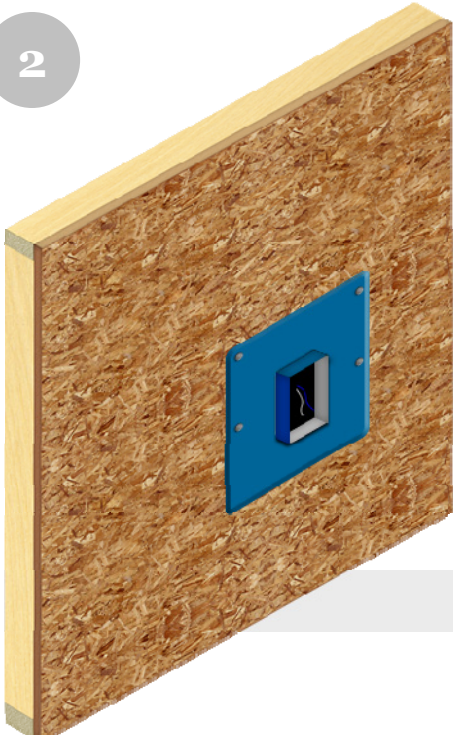


Using non-corrosive fasteners, secure the Quickflash® panel to the structure from the mid-point of the panel to the top.

3

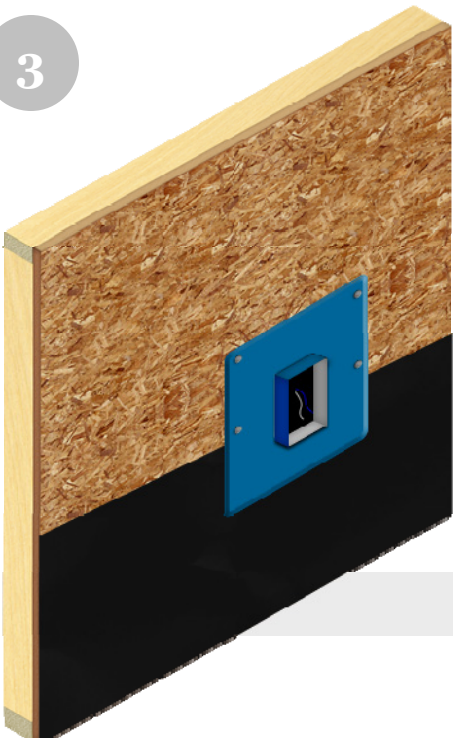

Slide the weather resistant barrier underneath the Quickflash® panel to the bottom of the electrical box.

4

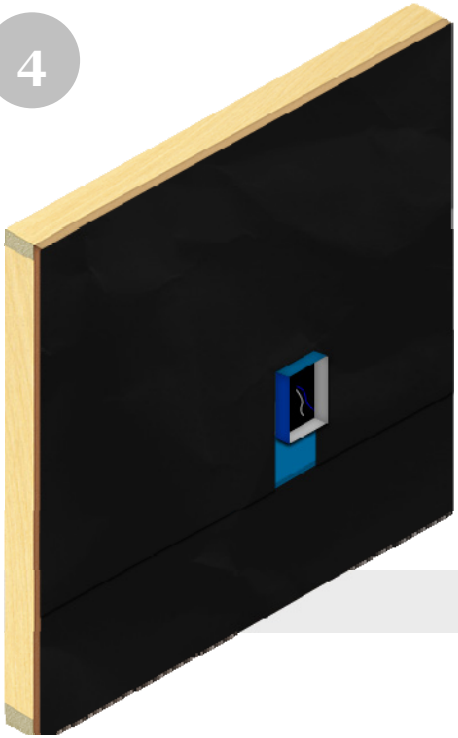

Install the weather resistant barrier carefully cutting an opening around the protruding electrical box, over the top of Quickflash® panel using shingle style method extending to the bottom of flashing panel or further.