


Click here to email Sales@Eco-BuildingProducts.com
Click here to order online at Eco-BuildingProducts.com
Click here to call us at 231.399.0700



How to Install Plumbing Flashing (before WRB)

IMPORTANT: Always refer to house wrap or building paper manufacturer's guidelines

1

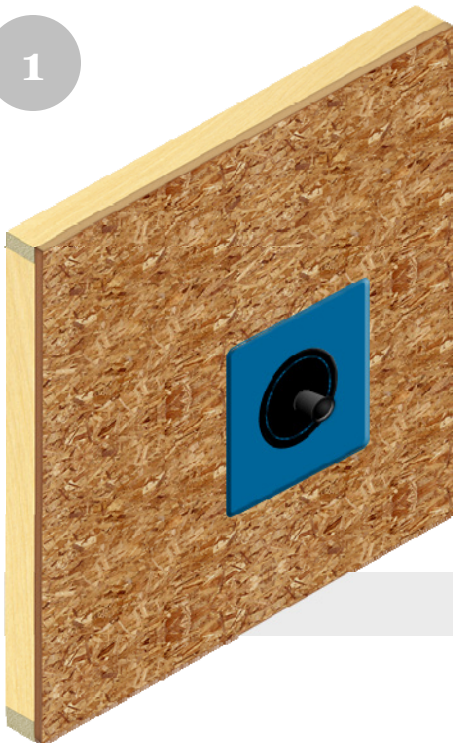

Slide Quickflash® panel onto pipe firmly pressing panel against the wall or studs.

2




Optional: Using non-corrosive fasteners, secure the Quickflash® panel to the structure from the mid-point of the panel to the top.

3



Slide the weather resistant barrier underneath the Quickflash® panel to the bottom of the pipe.

4

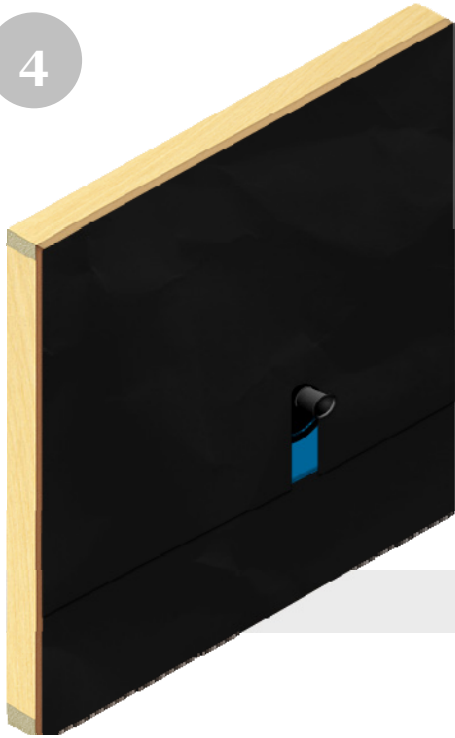

Install the weather resistant barrier carefully cutting an opening around the protruding pipe, over the top of Quickflash® panel using shingle style method extending to the bottom of flashing panel or further down.